



*日本語の取扱説明書は裏面をご覧ください。
INSTRUCTION MANUAL

WCB-11 (BLACK)
WCB-11W (WHITE)
TMB-1 (BLACK)
TMB-1W (WHITE)
MAB-1

SPEAKER MOUNTING BRACKETS

- These brackets are designed for use exclusively with the F-150 series speakers.
- Use the WCB-11 (WCB-11W) to install the speaker on a wall or ceiling.
- Use the TMB-1 (TMB-1W) to install the speaker on a desk or metal pipe frame.
- Use the MAB-1 to install the speaker on a microphone stand.
- **Each bracket can withstand a load of up to 4 kg (8.8 lb.).**

HANDLING PRECAUTIONS


- Verify that a mounting base can safely support the weight of both the bracket and mounted speaker. Reinforce the base if its strength is insufficient.
- No screws for mounting the bracket to the mounting base are supplied. Use appropriate commercial screws when mounting the bracket to the wall (ceiling).
- Only use the bracket indoors. Do not use it outdoors.
- After installation, verify that each screw is securely tightened.
- Never loosen two safety screws.
- TOA takes no responsibility for any accidents or injuries resulting from the falling of the speaker due to incorrect installation.

INSTALLATION


WCB-11 and WCB-11W

1. Remove a safety pin, and then the vertical angle adjustment screw.
2. Attach the speaker bracket to the speaker.
3. Mount the wall (ceiling) bracket to a wall (ceiling) using commercial screws. (It is important to confirm that the wall or ceiling can safely support the weight of both the bracket and mounted speaker before mounting.)
4. Join the two brackets using the vertical angle adjustment screw, then insert the safety pin into the screw hole.
5. After positioning the speaker, securely tighten both the vertical and horizontal angle adjustment screws with the supplied hexagonal wrench.

[Note]: Check for secure contact between the two brackets.

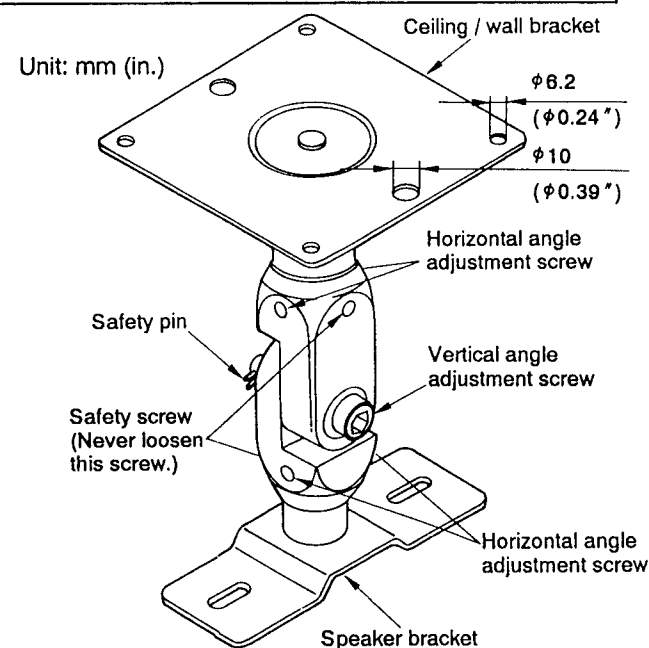

Mounting Dimension

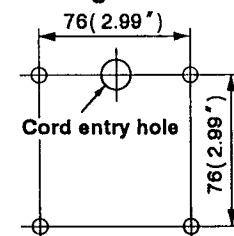

Accessories:


Hexagonal wrench2
(1 large and 1 small)
Speaker fixing screw2
Instruction manual1

TMB-1 and TMB-1W

1. Pull the arm shaft out of the pedestal.
2. Attach the speaker bracket to the speaker.
3. Mount the pedestal on a secure base, such as a desk top or metal pipe frame, of no more than 30mm (1.18") in thickness. Ensure that the base is stable, and that it can safely support the weight of both the bracket and mounted speaker.
4. With the speaker mounted, insert the arm shaft into the pedestal hole and secure with the arm shaft fixing screw.

[Note]: For maximum stability, ensure that the end of the shaft passes completely through the pedestal, protruding several centimeters (approx. 1") out of the other side, and that the fixing screw is clamped securely on a flat side of the hexagonal shaft, and not a corner.


5. After positioning the speaker, securely tighten the angle adjustment screws.

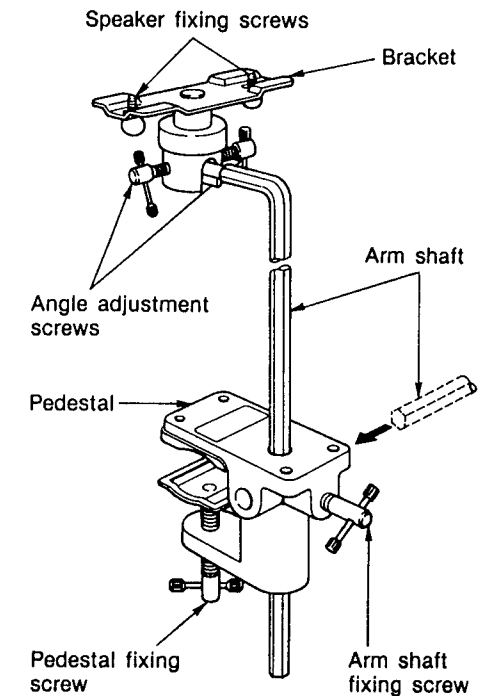

MAB-1

1. Attach the bracket to the speaker.
2. With the speaker mounted, mount the bracket to a microphone stand. (The MAB-1 is threaded 5/8". Use the supplied thread adaptor for a stand with 5/16" thread.)
3. After positioning the speaker, securely tighten the angle adjustment screw.

[Note]: For maximum stability, select the microphone stand with a wide base. Do not mount the bracket to a boom stand.

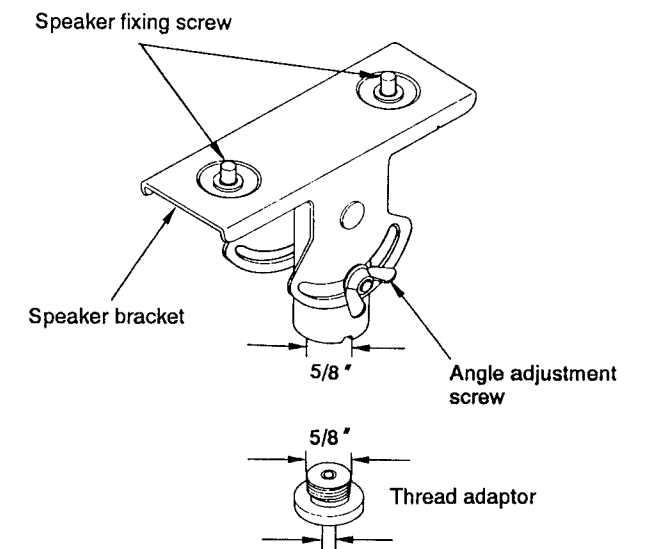

. 91/5